

INSTALL NOTES

Selecting and downloading applications

The applications described on this CD are preinstalled on your mobile phone. If you accidentally deleted one of these applications you can download a back-up directly to your phone by going to wap.siemens-mobile.com in your mobile phone internet browser. The back-up applications are free-of charge, the GPRS connection costs may vary depending on your operator.

Further applications and add-ons can be found on our website at www.siemens-mobile.com/fundownloads or on our WAP portal wap.siemens-mobile.com.

Installation instructions

In order to install themes, ring tones, images or animations on your mobile phone from this CD, please click on the left of the associated categories listed. A window will open displaying all files.

Install the Mobile Phone Manager Software onto your PC and then connect your mobile phone with your PC using the data cable. Copy the desired files by marking them and selecting EDIT:COPY from the menu.

Using your explorer programme, select the MOBILE folder and use EDIT:PASTE to insert the copied files into the appropriate sub-folder under data/themes, "sounds", "pictures", or "animations".