

## INSTALL NOTES

---

### Selecting and downloading applications

The applications described on this CD are preinstalled on your mobile phone. If you accidentally deleted one of these applications you can download a backup directly to your phone by going to the "Downloads" section of [wap.siemens.com](http://wap.siemens.com) in your mobile phone internet browser.

You can also download a backup or update the existing application via the "Phone Content" or "Downloads" option of the Download Assistant.

The backup applications and downloads are free of charge, the GPRS connection costs may vary depending on your operator.

Further applications and add-ons can be found on our web site at [www.siemens.com/fundownloads](http://www.siemens.com/fundownloads) or on our WAP portal [wap.siemens.com](http://wap.siemens.com).

If you experience problems with the connection settings of your mobile phone please use our settings configurator on our web site [www.siemens.com/mobilescustomer care](http://www.siemens.com/mobilescustomer care).

### Installation instructions

In order to install themes, ring tones, images or animations on your mobile phone from this CD, please click on the associated link. A window will open displaying all files.

Install the Mobile Phone Manager Software onto your PC and then connect your mobile phone with your PC.

Copy the desired files by marking them and selecting EDIT:COPY from the menu.

Using your explorer programme, select the MOBILE folder and use EDIT:PASTE to insert the copied files into the appropriate sub-folder under data/themes, "sounds", "pictures", or "animations".